



MH-C401FS

Smart Pulse Charger

1-4 AA / AAA NiMH / NiCD Batteries

Thank you for purchasing the Powerex battery charger. Read these instructions carefully and thoroughly before operating this unit. **IMPORTANT SAFETY INSTRUCTIONS. READ AND SAVE THESE INSTRUCTIONS.**


GENERAL PRECAUTIONS

- Do not charge batteries other than rechargeable NiCD and NiMH.
- Do not expose the unit to rain or moisture due to the risk of fire.
- Do not operate the charger if it appears damaged in any way.
- Always place the battery cells with positive tip facing top. Incorrect polarity may cause fire or explosion.
- Always use the supplied AC adapter or cigarette lighter adapter (not included in all versions). The cigarette lighter adapter includes a fuse. CAUTION: for continued protection against risk of fire, replace only with the same type and rating.
- Do not allow the battery terminals to become shorted.
- To reduce the risk of damage to the AC power adapter, always pull by connector rather than the cord.

FEATURES & SPECIFICATIONS

- Rapid charge both rechargeable NiMH and NiCD AA / AAA batteries in 1 to 2 hours.
- Four individually monitored charging slots.
- Manually switch between 100 minute rapid charge and 5 hour gentle charge.
- Smart pulse charging.

Rapid Charge Current:	1000mA (AA), 500mA (AAA)
Slow Charge Current	300mA
Trickle Charge Current:	50mA
Charging Cell Configuration:	1, 2, 3 or 4 AA / AAA
Microprocessor:	Negative DeltaV
Input Voltage:	12V DC 1000mA

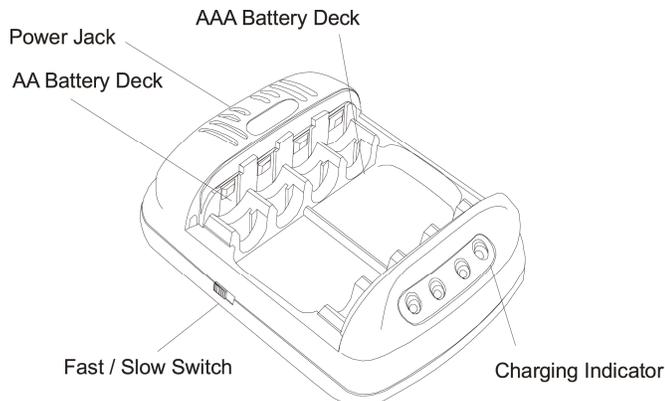

CHARGING INSTRUCTION

For brand-new NiMH batteries, it may be necessary to cycle them three to five times before they reach peak performance. Battery cycling can be achieved simply by using the batteries completely and recharging them.

When using at home / office

1. Connect the supplied AC adapter to the charger's power input jack in the rear. **Do not place batteries in the charger before powering it up.**
2. Plug the AC adapter into a compatible outlet.
3. Using the switch on the left side of the charger, select *FAST* for 1 to 2 hour rapid charge and select *SLOW* for 5-hour gentle charge.

WHEN TO USE FAST AND SLOW: The five-hour gentle charge is designed to keep battery temperature low during charging and can improve overall battery life. When charging time is not critical, use the *SLOW* 5-hour gentle charge to enhance battery life.

4. Place the batteries into the charger.

WARM BATTERIES? It is normal for batteries to become hot during recharging. Temperature may reach as high as 131 degree F.

Indicator Condition	Meaning
RED	Charging
GREEN	Charge Completed. Trickle Charging
RED FLASHING	Bad Battery

5. When the light turns green, battery in that slot is ready for use. If left inside the charger, it will be trickle charged.

When using in a vehicle (Optional Car Kit Required)

Make sure your vehicle's output voltage is between 9V to 15V, and is capable of supporting a 1000mA current drain. If you have any concerns regarding this, refer to your vehicle owner's manual.

1. Plug in the supplied cigarette lighter adapter into your vehicle's cigarette lighter, without the charger attached. Verify that the green power LED on the cigarette lighter adapter is illuminated. If LED does not turn on, your vehicle may need to be running in order to energize the cigarette lighter or the inline fuse may need to be replaced.
2. Connect the charger to the connector-end of the cigarette lighter adapter.
3. Follow steps 3-5 on the section "When using at home / office".

Manufactured By:
MAHA ENERGY CORP.

Tel: 1-800-376-9992

www.mahaenergy.com

Copyrighted © 1998-2007 Maha Energy Corp.